

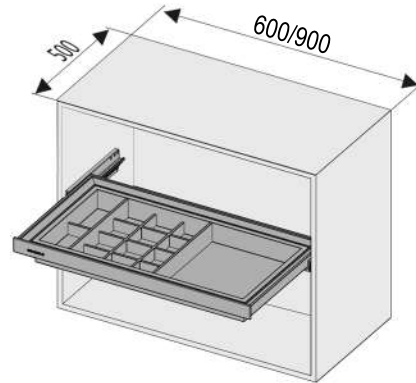


### Parts List

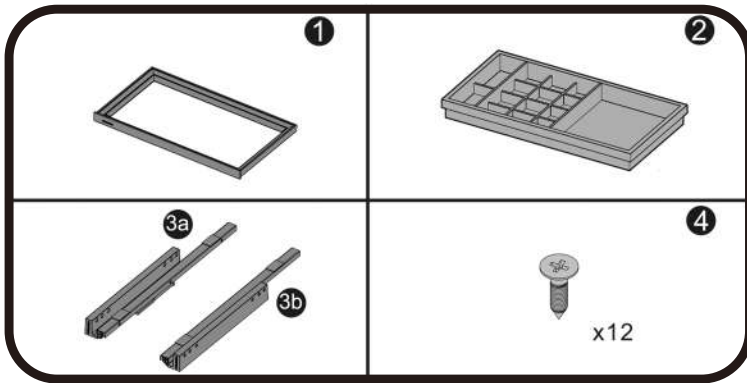


### Illustration for Drilling

- 1 Drill 12 holes with  $\varnothing$  of 2.5mm each side.

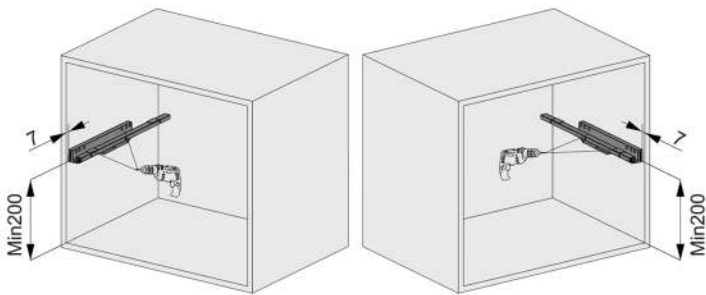


### Slider Installation


- 2 Affix the left and right sliders using 12pcs of screws.

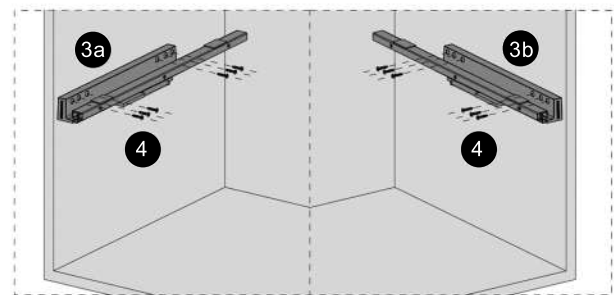

### Drilling size ( Left )

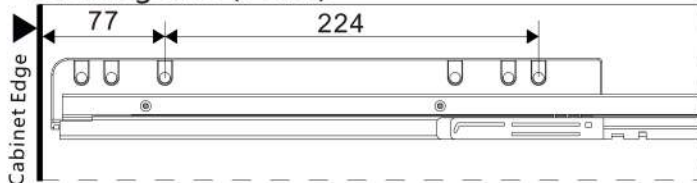


### Drilling size ( Right )

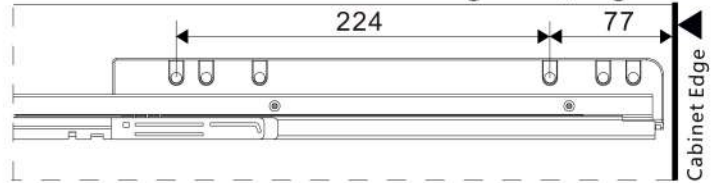


### Frame Assembly

- 3 Hold the frame at the illustrated angle (3.1) and push to the sliders (3.2). Make sure that the frame is firmly attached to the velcro.

3.1.

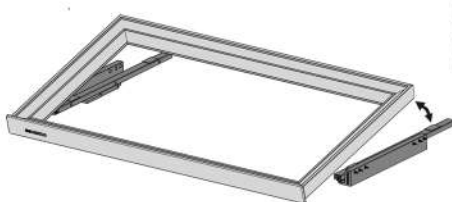

3.2.

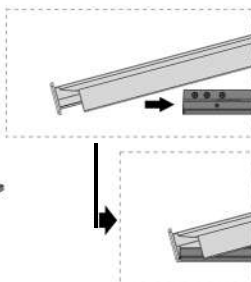

### Tray Assembly

- 4 Place the storage tray inside the frame.

